


## Software presets

The ES series offers additional capabilities. With the unit in the standby mode, press the LOWER, RAISE, and FUNCTION keys simultaneously (see Below). Keep holding then press operate. Release all the keys.

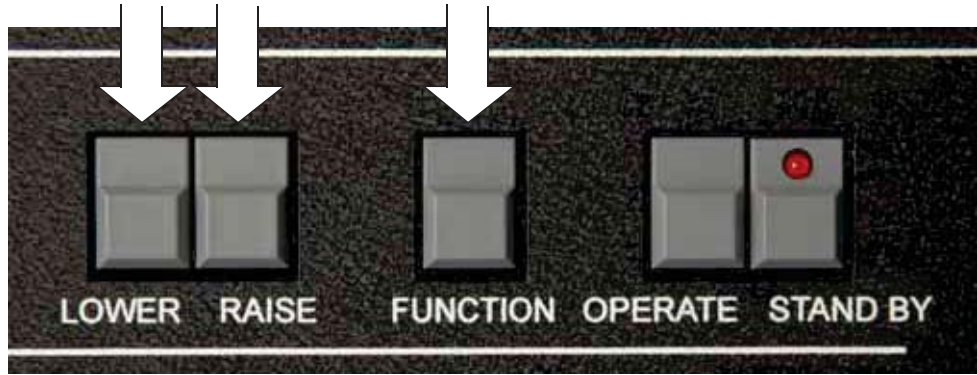

Press LOWER/RAISE/FUNCTION Keys Simultaneously

The resulting LCD screens will appear as follows:



Use the raise lower keys select the appropriate software preset in accordance with the table below.

BIT NUMBER	--7-----	----6----	---5-----	---4-----	---3-----	-----2-----	-----1-----	----0-----
MODE	RESERVED	RESERVED	RESERVED	RESERVED	RESERVED	0=UP/DWN NOR 1=UP/DWN REV	0=200K STEPS 1=100K STEPS	0=EXCITER 1=PA

Write the preset into memory by pressing the function key, then press standby.

Press operate, check that the correct software preset has been selected by checking the number shown displayed for a short time on the lcd screen. See example below



Up/Down normal : 100kHz steps : exciter mode.